

## Telescopic Display Pole Instructions & Tips

### Pole Assembly:

Remove the top rubber bung from your pole,



In a large open space, flick the pole away from you as if casting a fishing rod (not too hard)



Starting at the tip section give a little gentle pull and twist on each joint to lock the pole in place. Don't pull too hard or you will have trouble disassembling the pole.

If you choose to you can put a small wrap of black insulation tape on each joint for additional support (not supplied).



Once your pole is assembled simply unscrew the base cap and place your pole over the top of your ground stake (sold separately).



## **Pole Disassembly:**

Screw the base cap on to your pole.

With the base of the pole on the ground, twist and pull down each section one at a time. Always start from the base and work your way towards the tip section. If you start from the tip section then as the pole collapses down sections can get snagged in others and damage your pole.

Once your pole is fully collapsed, place your rubber bung in the top and pack away your pole for the next use.

## **Pole Tips:**

In wind speeds in excess of 18mph it is best to take your pole down.

When attaching a windsock/spinner to the tip of your pole make sure that you give the swivel clip on the windsock/spinner some lubrication to assist the swivel from drying out and breaking.

If attaching a flag it is advised to attach the flag to the 2<sup>nd</sup> section or lower from the tip of the pole. Due to the pull/drag of a flag it could damage the tip section that is designed for windsocks/spinners.

**Always use a ground stake to support your pole or one of our special caravan/car wheel mount stands.**

**Do not tether your pole to a fence etc. By tethering to a fence etc. it causes a pressure point on the pole which can cause it to break. Do not mount your pole in a parasol base. The screw to hold the pole in place will damage your pole base.**

**Standard pole stakes are suitable for pole sizes 3m-5m  
Super pole stakes are advised for pole sizes 6m and larger. Multiple super pole stakes may be required for sizes 8m upwards.**

**Ensure that your pole stakes are 20-25% inserted in to the ground**

